QUICK INSTALLATION INSTRUCTION SHEET FOR WANGTEK EXTERNAL FLOPPY TAPE BACKUP SOLUTIONS

WARNING: If you have only one Floppy Diskette drive installed in your system ensure that your system configuration (diagnostic setup) does not recognize the tape drive as the "B" floppy. The system diagnostic must report the "B" drive as "Not installed".

1. Turn off computer and unplug its power cable.
2. Remove computer's cover
3. Remove the power cable from one of your floppy diskette drives (A or B).
4. Remove the system floppy diskette drive cable from the floppy controller.
5. Remove an expansion slot bracket from the computers rear panel.

   Note: Choose one on the component side of the floppy disk controller.

6. Install the Wangtek External Phantom Select Cable in the expansion slot made available in step 5.
7. Connect the female 34 pin connector on the external phantom select cable to the 34 pin male connector on the floppy disk controller. (Match Pin 1, Brown Strip on Ext. Phantom Select Cable, to Pin 1).
8. Connect the female 34 pin connector on the floppy diskette drive cable to the male 34 pin connector of the external phantom select cable. (Match Pin 1 to Pin 1).
9. Connect the male connector of the power splitter cable to the female power supply power connector removed in step 3.
10. Connect one of the female connectors of the power splitter cable to the male connector on the floppy diskette drive.
11. Connect the other female connector of the power splitter cable to the male power connector on the external phantom select cable.
12. Connect one end of the 37 pin external I/O cable to the bracketed connector of the external phantom select cable at the back of the computer.
13. Connect the other end of the external I/O cable to the rear of the tape drive subsystem.

    This Instruction and it's associated Diagram replace Section 2.6 of the User's Guide, #63272-001. Please refer to the user's guide if you require additional information about this hardware.

14. Install computer's cover.
15. Plug in computer power cable.

QUICK INSTALLATION INSTRUCTION DIAGRAM FOR WANGTEK EXTERNAL FLOPPY TAPE BACKUP SOLUTIONS

(THIS DIAGRAM STARTS AT STEP 3 OF QUICK INSTALLATION INSTRUCTION)

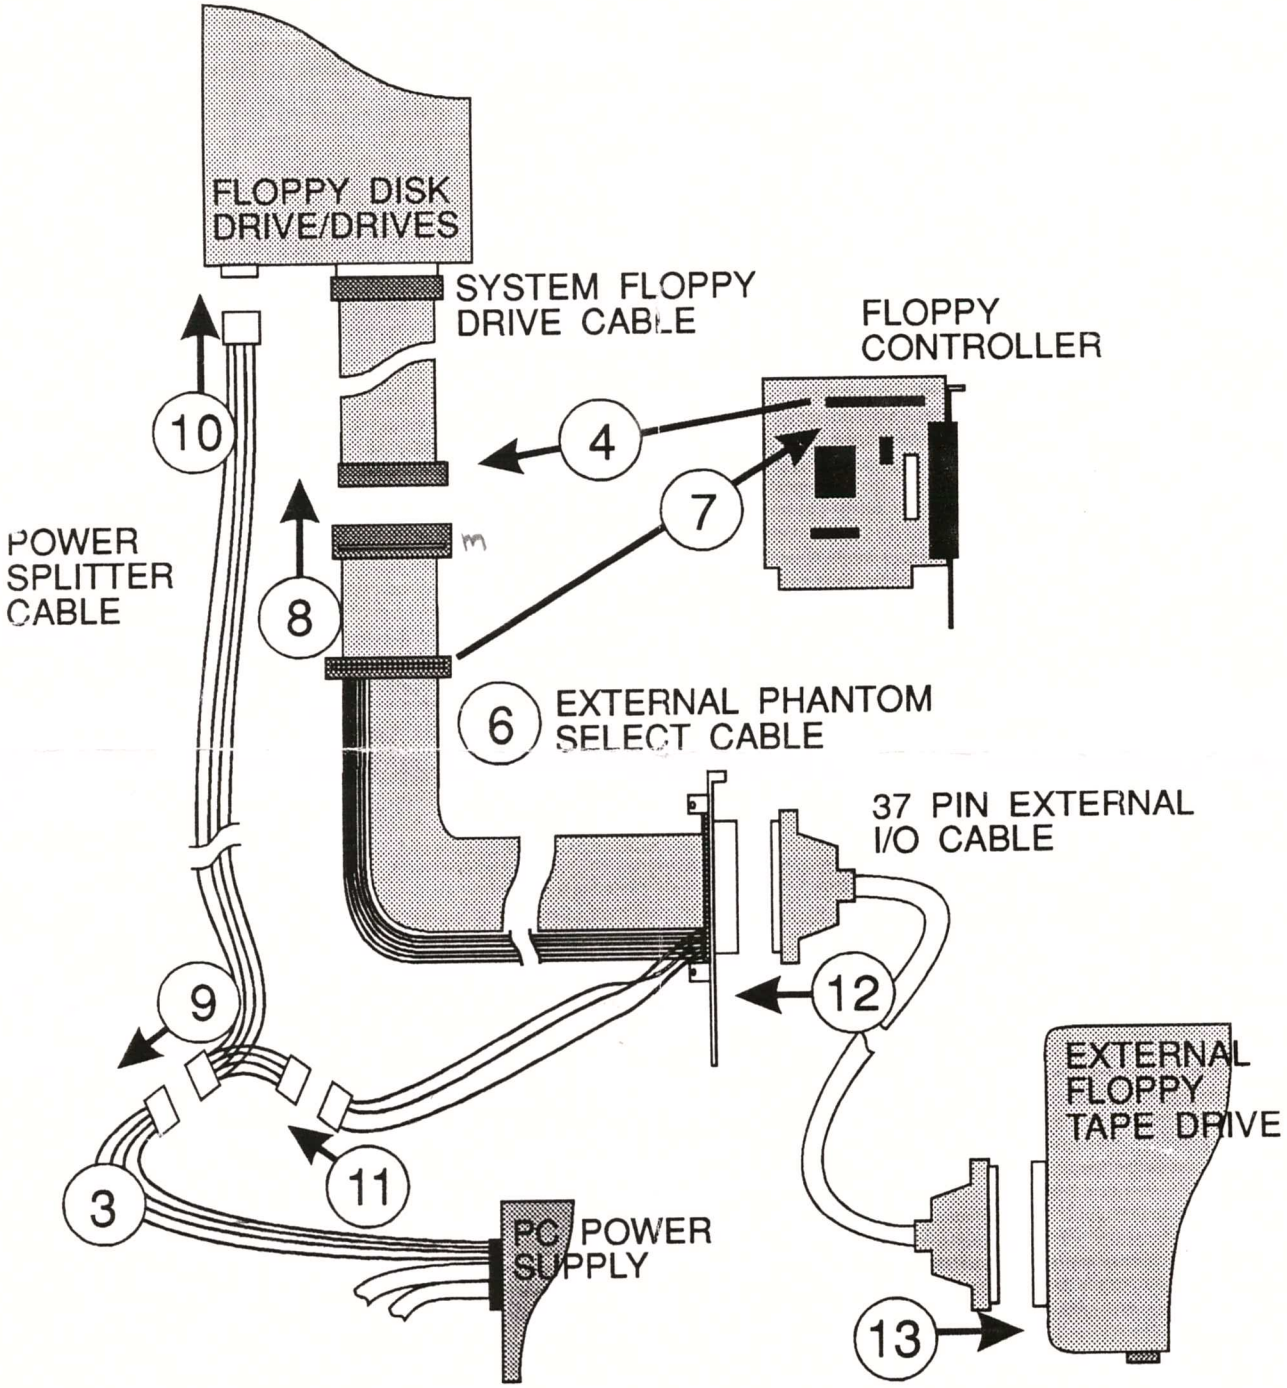

This Diagram and and it's associated Instruction replace Section 2.6 of the User's Guide, #63272-001.

63466-009 Rev. A